

# **Dutchess**

## **BAGEL PUSHER**



**For safe and quick dislodge of product from gravity fed Bun & Bagel Slicers**

**Extreme caution must be used when removing jammed product from product Chute and cutting Blade to avoid personal injury or damage to moving parts!**

- 1) When product jam occurs, SHUT POWER to the Slicer OFF!**
- 2) When applicable, apply pressure to the Blade Brake until Blade comes to a complete stop. If your slicer does not have a Blade Brake, wait until the Blade coasts to a complete stop before proceeding.**
- 3) Turn Thickness Adjustment Knob (Model 270 & 270C) clockwise to open the space between the Blade and the Lower Chute.**
- 4) You are ready to safely use the Dutchess Bagel Pusher to dislodge the jammed product.**
- 5) After removing jammed product, turn Thickness Adjustment Knob counter clockwise to desired setting and resume slicing.**